

BUILDERS' HARDWARE

.. Made by ..

Russell & Erwin Mfg. Co.,

NEW BRITAIN, CONNECTICUT,

U. S. A.



Warehouses:

NEW YORK:—43, 45, and 47 Chambers Street.

PHILADELPHIA:—19 North Fifth Street.

LONDON, E. C.:—Brooks Wharf, Upper Thames Street.

BALTIMORE:—Wm. H. Cole & Sons, Agents, 17 South Charles St.

Sample Office:

CHICAGO, ILLS.:—941-2 Marquette Building.

1897.

INDEX OF DESIGNS.

Design.	School.	Page.
AEGINA	Grecian	40A to 40D
ARABIAN	113 to 116
BASE AND BEVEL—Plain	8A to 8D

NOTE.

Owing to a change in the list price of Locks No. **C 1225 M**, between the printing and the publication of this catalogue, the list prices of all **MASTER-KEYED COLUMBIA OFFICE SETS**, made up with Locks No. **C 1225 M**, are advanced 45 cents per set.

COURTENAY	French Renaissance	61 to 64
DE BERCY	105 to 108
DEDHAM	Colonial	25 to 28
DELPHI	Grecian	33 to 36
DIJON	Gothic	85 to 88
ELEUSIS	Grecian	37 to 40
FRANKFORT	German Rococo	73 to 76
GRAVELOT	Louis XV.	81 to 84
HARRINGTON	Renaissance	57 to 60
LEXINGTON	Colonial	17 to 20
MAYFLOWER	Colonial	29 to 32
MOREAU	Louis XVI.	53 to 56
NORMANDIE	101 to 104
PISANO	Italian Renaissance	69 to 72
PRISCILLA	Colonial	24A to 24D
PRUDHON	Empire	45 to 48
ROPE	Colonial	9 to 12
ROPE—Oval	Colonial	13 to 16
ROUNDED EDGE—Plain	1 to 4
ROUNDED EDGE—Plain Oval	16A to 16D
VEROCCHIO	Italian Renaissance	77 to 80
WALSINGHAM	Romanesque	49 to 52

INDEX.

A		Page.	D		Page.
Adjusters, Casement Windows,		250	Door Bolts, Flush,		256 to 259
Axle Pulleys,		228 to 231	“ “ Mortise,		143
B			“ “ “ Flush,		260
Back Flaps,		193	“ Checks,		196
Bars, Espagnolette,		262	“ Fastenings, Chain,		264
“ Shutter,		232	“ Handles,		201 to 222
Bolts, Flush,		256 to 259	“ Hangers,		225, 226
“ “ Dutch Door,		261	“ Knobs,		179 to 181
“ “ Mortise,		260	“ Locks and Latches,		117 to 178
“ Mortise, Door,		143	“ Pulls,		197 to 199
“ “ Dutch Door,		147	“ Rails, Sliding,		227
“ “ Door and Latch combined,		143, 144	“ Sheaves,		223 to 226
“ Square, Cased,		256	Drawer Pulls,		264 to 266
“ Water Closet Indicator,		263	Dutch Door Bolt, Mortise,		147
Bommer's Spring Hinges,		274, 275	“ “ “ Flush,		261
Buttons, Push,		185	E		
Butts, Fast Joint,		190	Elbow Catches,		251
“ Loose Pin,		186 to 189	Electric Push Buttons,		185
“ Shutter,		192	Espagnolette Bars,		262
“ Wrought Brass,		192, 194, 195	F		
C			Fasteners, Casement Window,		251
Cased Bolts,		256	“ Sash,		234, 235
Casement Window Adjusters,		250	Fastenings, Chain Door,		264
“ “ Fasteners,		251	Flaps, Back,		193
Catches, Cupboard,		252	Flush Bolts,		256 to 259
“ Elbow,		251	“ Sash Lifts,		236, 237
“ French Window,		253	“ “ “ and Locks, comb.,		237
“ Transom,		254	French Window Catches,		253
Centers, Sash,		240, 241	“ “ Latches,		146
Chain Door Fastenings,		264	“ “ Locks,		117, 118
Chains, Transom,		242	H		
“ Sash,		272	Handles, Lever,		183, 184
Coat and Hat Hooks,		267 to 269	“ Store Door,		201 to 222
Cord Irons, Sash,		227	“ T,		182
Cupboard Catches,		252	Hangers, Sliding Door,		226
“ Knobs,		181			
“ Turns,		254, 255			

	Page.
Hat and Coat Hooks,	267 to 269
Hinges, Bronze,	190
“ Pocket,	193
“ Shutter,	194
“ Spring, New Idea,	273
“ “ Bommer's,	274, 275
“ “ Floor, Matchless,	276
Hinge Plates,	191
Hooks, Ceiling,	270
“ Coat and Hat,	267 to 269
“ Pull Down,	239
“ School-House,	270

I

Irons, Sash Cord,	227
-----------------------------	-----

K

Kick Plates,	191
Knobs, Door,	179
“ “ Screwless,	180
“ Cupboard,	181
“ Mortise Bolt or Half,	181
“ Shutter,	233

L

Latches, Elevator,	149
“ French Window,	146
“ Mortise and Bolt combined,	143, 144
“ Mortise Knob,	145
“ Mortise, and Pull comb'd, for Sliding Doors,	139
“ Mortise, Night,	148
“ “ Knob, Vestibule D'r, Flat Fr'ts,	151, 153, 155
“ Mortise, Knob, Vestibule Door, Flat Fronts, Columbia,	157, 159
“ Mortise, Knob, Vestibule Door, Rabbeted,	162, 166
“ Mortise, Knob, Vestibule Door, Rabbeted, Columbia,	164

	Page.
Latches, Mortise, Columbia, for Office Doors,	133
“ Horizontal Rim Night, Columbia,	173
“ Water Closet,	263
Lever Handles,	183, 184
Lifts, Sash and Window,	235 to 238
“ “ “ Lock, combined,	235
“ Transom,	243 to 249
Locks, Mortise Knob, Wrought Steel; Steel. Brass, and Bronze Fronts, Iron and Steel Keys,	119 to 121
“ Mortise Knob, Bronze Fr'ts, Steel Keys,	117, 118, 122 to 125
“ Mortise Knob, Bronze Fr'ts, 3 Bolts, Steel Keys,	126
“ Mortise Knob, Master-Keyed,	127 to 131
“ Columbia, Master-Keyed, for Offices,	132, 134
“ Mortise Knob, for French Windows,	117, 118
“ Mortise Knob, Rab'd Fr'ts,	135
“ Mortise Knob, Front Doors, Flat Front,	150, 152, 154
“ Mortise Knob, Front Doors, Flat Fr't, Col'bia,	156, 158, 160
“ Mortise Knob, Front Doors, Rabbeted Front,	161, 165
“ Mortise Knob, Front Doors, Rabbeted Front, Col'bia,	163
“ Mortise Dead, Horizontal, Iron and Brass Fronts,	140
“ Mortise Dead, Horizontal, Brass and Bronze Fronts,	141
“ Mortise Dead, Columbia, Horizontal,	142
“ Mort., Sliding Door,	136 to 138
“ Rim Knob, Horizontal,	168, 169
“ “ “ Upright,	167
“ “ “ “ Master-Keyed for Hotels,	170, 171
“ Rim Dead, Horizontal, for Closets, etc.,	172
“ Rim Dead, Horizontal, for Store Doors, Columbia,	176

	Page.
Locks, Rim Dead, Upright, for Store Doors,	174
“ Rim Dead, Columbia,	175
Lock Sets, Villa,	177, 178

M

Master-Keyed Locks,	127 to 134
Matchless Floor Hinges,	276
Mortise Bolts,	143
“ Flush Bolts,	260
“ Bolt and Lat'es comb.,	143, 144
“ Bolt Knobs,	181

N

New Idea Spring Hinges,	273
Numbers,	271

P

Pins, Transom,	242
Plates, Sash,	239
“ Transom,	240, 241
Pocket Hinges,	193
Pulleys, Axle,	228 to 231
“ Screw,	232
Pull-down Hooks,	239
Pulls, Door,	197 to 199
“ Drawer,	264 to 266
Push Buttons,	185

R

Rail, Sliding Door,	227
-------------------------------	-----

S

Sash Centers,	240, 241
“ Chains,	272
“ Cord Irons,	227
“ Fasteners,	234, 235
“ Lifts,	235 to 238
“ “ and Locks comb'd,	235, 237
“ Plates,	239
“ Sockets,	239

	Page.
School-House Hooks,	270
Screw Pulleys,	232
Sets, Villa,	177, 178
Sheaves, Door,	223 to 226
Shutter Bars,	232
“ Butts,	192
“ Knobs,	233
“ Sheaves,	223, 224
Sliding Door Latches,	139
“ “ Locks,	136 to 138
“ “ Pulls,	139
“ “ Rail,	227
“ “ Sheaves,	223 to 226
Sockets, Sash,	239
Spindles, Knob,	180
Spring Hinges,	273 to 276
Square Cased Bolts,	256
Store Door Handles,	201 to 222
Swivel Spindles,	180

T

T Handles,	182
Thumb Pieces and Roses,	182
Transom Catches,	254
“ Chains,	242
“ Lifters,	243 to 249
“ Pins,	242
“ Plates,	240, 241
Turnbuckles,	251
Turns, Cupboard,	254, 255

V

Villa Door Sets,	177, 178
----------------------------	----------

W

Window Stop Bead Screws, and Washers,	232
Water Closet Indicator Bolts,	263
“ “ Latches,	263
Wrought Brass Butts,	192, 194, 195



A



B



C




D



E

A — Knob No. 374
Escutcheon No. 067
B — Knob No. 372
Escutcheon No. 065

C — Escutcheon No. 480
D — Sash Lift No. 1183
E — Push Button No. 145

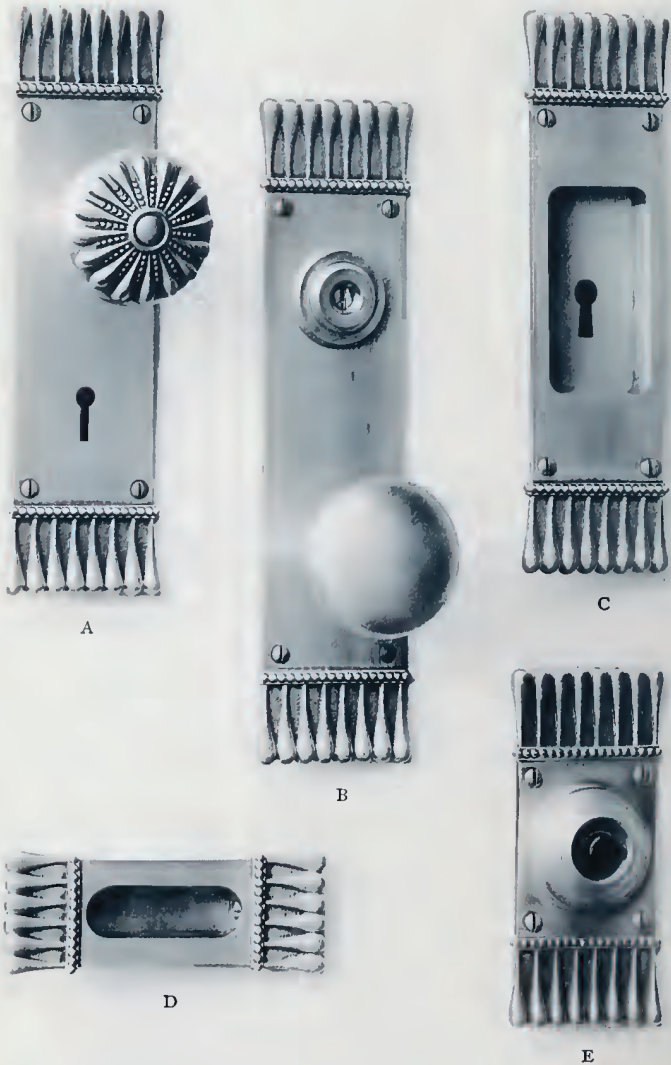


A — Knob No. 689
 Escutcheon No. 097 1/8
 B — Knob No. 359
 Escutcheon No. 091 1/2

C — Escutcheon No. 496
 D — Sash Lift No. 094
 E — Push Button No. 94



A — Knob No. 437
Escutcheon No. 1983
B — Knob No. 652
Escutcheon No. 1981

C — Escutcheon No. 1337
D — Sash Lift No. 1156
E — Push Button No. 2108

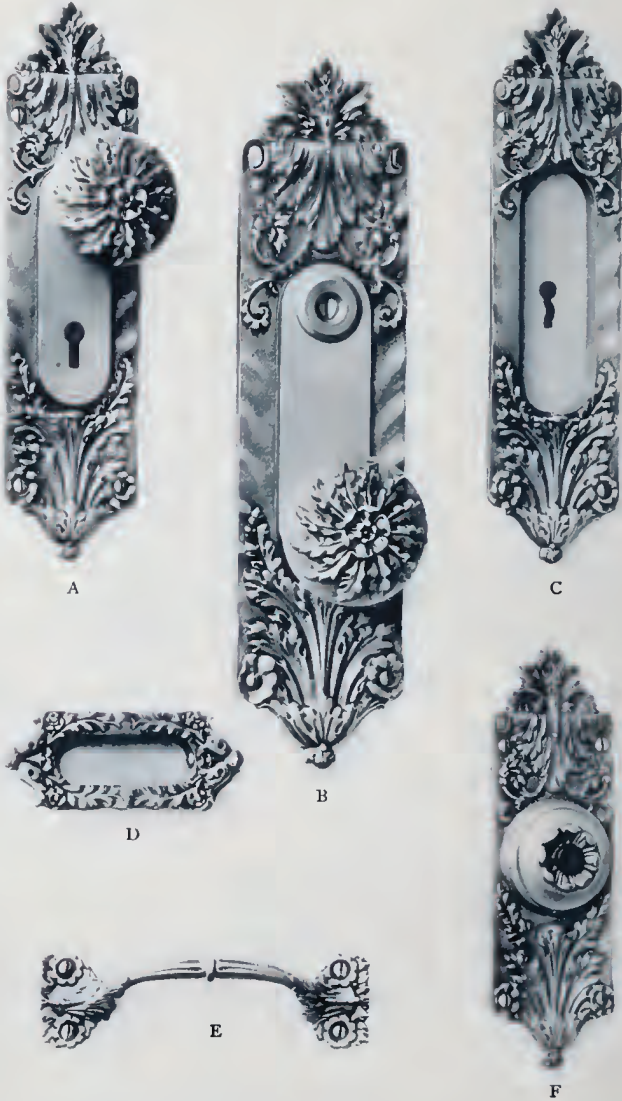

A — Knob No. 601
 Escutcheon No. 721
 B — Knob No. 602
 Escutcheon No. 720

C — Escutcheon No. 425
 D — Sash Lift No. 724
 E — “ “ “ 725
 F — Push Button No. 720

Verocchio.—Italian Renaissance.



A

B

C

STORE DOOR HANDLES.

A—Nos. C 654 and C 654½

" CN 654 " CN 654½

Moreau.

B—Nos. C 650 and C 650½

" CN 650 " CN 650½

Pisano.

C—Nos. C 720 and C 720½, Nos. CN 720 and CN 720½
Verocchio.